



Mobile Print/Scan Guide for Brother iPrint&Scan (iOS)



Before You Use Your Brother Machine

Definitions of Notes

We use the following symbol and convention throughout this User's Guide:



Tips icons indicate helpful hints and supplementary information.

Trademarks

Wi-Fi and Wi-Fi Direct are registered trademarks of Wi-Fi Alliance®.

Google Cloud Print is a trademark of Google Inc. Use of this trademark is subject to Google Permissions.

Mac, Safari, iPhone, iPod touch, iPad, iPad mini and AirDrop are trademarks of Apple Inc., registered in the U.S. and other countries. iCloud and App Store are service marks of Apple Inc., registered in the U.S. and other countries.

Any trade names and product names of companies appearing on Brother products, related documents and any other materials are all trademarks or registered trademarks of those respective companies.

Table of Contents

1	Introduction	1
	Download Brother iPrint&Scan from the App Store.....	1
	Device Connections.....	1
	Set a Device	2
	Edit an Image	2
	Icons	3
2	Print	4
	Print Photos Stored on Your Mobile Device	4
	Print Documents	4
	Print Using Cloud Services	5
	Print Web Pages.....	5
	Add a Bookmark to a Web Page	6
	Edit Bookmarks.....	6
	Clear Your Entire Browsing History.....	6
	Print Data from the Clipboard	7
	Print Photos Taken with Brother iPrint&Scan	7
	Print Photos or Documents from Other Applications	8
3	Scan	9
	Scan Documents	9
	Send a Scanned Document by Email.....	9
	Scan and Save Documents to iCloud.....	10
	Open, Upload and Share Scanned Images.....	10
4	Copy	11
	Copy Preview	11
5	Fax	12
	Send a Fax	12
	Receive a Fax.....	12

Download Brother iPrint&Scan from the App Store

Brother iPrint&Scan allows you to use features of your Brother machine directly from your iPhone, iPod touch, iPad, and iPad mini.

You can install Brother iPrint&Scan from the App Store. For best results, make sure you are using the latest version.

Device Connections

Connect your mobile device to your Brother machine using one of the following connection methods:

Wi-Fi®

To configure your Brother machine for a Wi-Fi connection, see your machine's *Quick Setup Guide*.

Wi-Fi Direct®

To configure your Brother machine for a Wi-Fi Direct network, download any of the following guides from your model's **Manuals** page on the Brother Solutions Center at <http://support.brother.com>.

- *Wi-Fi Direct Guide*
- *Software and Network User's Guide*
- *Online User's Guide*

Your Brother machine must support Wi-Fi Direct.

Remote Print (Google Cloud Print™)

To configure your Brother machine for printing using Google Cloud Print, download the *Google Cloud Print Guide* from your model's **Manuals** page on the Brother Solutions Center at

<http://support.brother.com>.

Your Brother machine must support Google Cloud Print.



Depending on your Brother machine and mobile device, supported connection methods may vary.

Set a Device

If a different machine is selected or if **No Device Selected** is displayed:

1 Tap a model name or **No Device Selected**.

2 Select a device.




 
-
- If your machine is not in the list, you may be able to find it by tapping **Set Manually**, and then entering its IP address.
 - Refresh the list by swiping over it.
-

Edit an Image




 
Edit

Tap .



Scale

- Tap . Move  or pinch open or closed to reduce or enlarge the image.
- Tap and drag the image to reposition it.










Adjust rotation and angle

- Tap  to adjust rotation and angle.
- Tap  to rotate 90 degrees clockwise.
- Drag  left or right to adjust angle.
()


Crop

- Tap . Move  to set the cropped area.
- Tap and drag the cropped area to move it.



Icons

Icon	Usage
	Settings
	Display menu
	 Select all pages
	 Deselect all pages
	 Enlarge thumbnail
	 Reduce thumbnail
	Thumbnail list
	Grid list




Print Photos Stored on Your Mobile Device

- 1 Tap .
- 2 Tap **Photo**.
- 3 Tap the file you want to print.
- 4 Tap **Done**.
- 5 Tap **Print**.






-
- Tap  to change **Print Settings**.
 - Tap  to edit the image.
-

Print Documents

- 1 Tap .
 - 2 Tap **Documents**.
 - 3 Tap the file you want to print.
 - 4 Tap **Print**.
-
-  Tap  to change **Print Settings**.
-


Print Using Cloud Services


- 1 Tap .
- 2 Tap **Cloud Services**.
- 3 Select the service you want to use.
- 4 Sign in.
- 5 Tap the file or note you want to print.
- 6 Tap **Print**.

 - Tap  to change **Print Settings**.
 - Tap  to edit the image.

Print Web Pages

Print web pages using the web browser included in Brother iPrint&Scan.

- 1 Tap .
- 2 Tap **Web Page**.
- 3 Navigate to the web page you want to print.
- 4 Tap **Print Preview**.
- 5 Tap **Print**.

 - Tap  to change **Print Settings**.



Add a Bookmark to a Web Page

- 1 Navigate to the web page you want to bookmark.
- 2 Tap + .




- 3 Tap **Save**.

Edit Bookmarks

- 1 Tap .
- 2 Tap **Edit**.
 - To delete a bookmark, tap , and then tap **Delete**.
 - To edit the title, tap it, and then edit the title. Tap **Save**.
- 3 Tap **Done**.

Clear Your Entire Browsing History

- 1 Tap .
- 2 Tap **History**.
- 3 Tap **Clear**.
- 4 Tap **Clear History**.

Print Data from the Clipboard

Print data, including photos, text and selected portions of web pages, that is copied to the Clipboard.

1 Copy the data to the Clipboard.

2 Tap .

3 Tap **Clipboard**.

4 Tap **Print**.



Tap  to change **Print Settings**.

Print Photos Taken with Brother iPrint&Scan

1 Tap .

2 Tap **Camera**.


3 Take a photo.

4 Select **Use Photo** or **Retake**.

5 Tap **Print**.



- Tap  to change **Print Settings**.

- Tap  to edit the image.

Print Photos or Documents from Other Applications


- 1 Navigate to the file you want to print, and then open it in Brother iPrint&Scan.

For example, if you are viewing a PDF file using Safari, tap **Open in...**, and then select **Brother iPrint&Scan**.





- 2 Tap **Print**.




Tap  to change **Print Settings**.

Scan Documents



Scan documents and save them in your mobile device's Photo Albums.

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap .
- 6 Tap **Save to Photo Albums**.



-
- Each page is saved as a separate file.
 - Tap  to edit the image.
-



Send a Scanned Document by Email

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap .
- 6 Tap **Email as JPEG** or **Email as PDF**.
- 7 Send a message.




-
- Tap  to edit the image.
-



Scan and Save Documents to iCloud

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap .
- 6 Tap **Save To iCloud as JPEG** or **Save To iCloud as PDF**.




- If you select **Save To iCloud as JPEG**, each page is saved as a separate file.
- If you select **Save To iCloud as PDF**, all pages of the document are saved in one file.
- The Brother ScanViewer app makes searching easier for files saved to iCloud by Mac. This app can be downloaded from the following sites;
 - ScanViewer for iOS: App Store
 - ScanViewer for Mac: Mac App Store
- Tap  to edit the image.

Open, Upload and Share Scanned Images

- 1 Load the document to scan in your Brother machine.
- 2 Tap .
- 3 Tap **Scan**.
- 4 Tap **Done** or **Scan**.
- 5 Tap .
- 6 Tap **Open Using Another App**.
- 7 Tap the app or service you want to use.



- To upload to online services, an online service account must be set up for your mobile device.
- Tap  to edit the image.

Copy Preview



1 Tap .

2 Tap **Start**.






3 Tap **Done** or **Scan**.

4 Tap **Copy**.







-
- Change **Preview Options** as needed.
 - Tap  to change **Copy Settings**.
 - Tap  to edit the image.
-

Send a Fax

- 1 Tap .
 - 2 Tap **Fax Send**.
 - 3 Tap  to select a fax number from your address book or tap **Enter Number** to enter the number manually.
 - 4 Tap **Fax documents from your machine** or **Select a file from this mobile device**.
 - 5 Tap **Scan** or select the file from your mobile device.
 - 6 Tap **Fax**.
-
- Tap  to enter more than one fax number.
 - Tap  to change **Fax Settings**.
 - Tap  to edit the image.

Receive a Fax

- 1 Tap .
 - 2 Tap **Fax Preview**.
 - 3 Tap the file you want to receive.
-
- The **Fax Preview** settings must be **on** in your Brother machine.
 - Tap  to share or save the file.
 - Tap  to print the file.
 - Tap  to change **Print Settings**.

brother

Visit us on the World Wide Web
<http://www.brother.com>



ENG
Version A